


Method 1: Connect the line definition of head B to the original car power amplifier host, and change the line to the same position according to the line of head A.

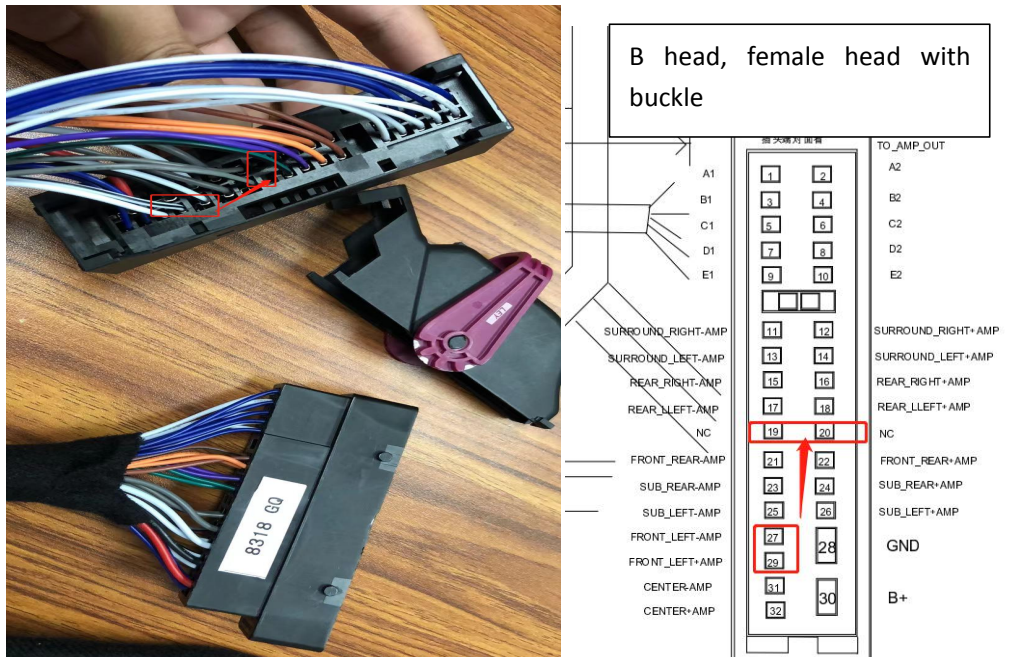

Method 2: Method 2: Change the position of the A plug, and use 2 wires to connect the PIN pin of the left front speaker of the original car and our 27.29 pin in parallel

